


If the hood is **C** (folded) it will look like this:

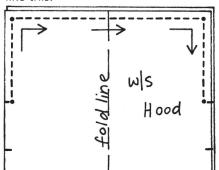

2. Open out the point/s and stitch a 10cm/4" long seam across it.




- **3.** Sew the modular jacket Step 1.
- **4.** Position the hood's back neck centrally on the jacket's, and stitch in two stages, from the centre out to the notch. For double layered hoods, just sew the outer layer.




5. Pin then sew the rest of the hood onto the fronts. For *double*

layer hoods, stop sewing at the hem's foldline.

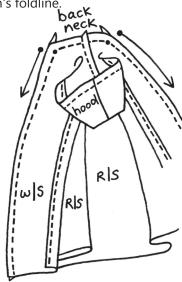

6. For *single layer hoods*, hem or bind the opening edge and turn up a regular hem at the bottom.




For double

Iayer hoods,
"bag out" the
Iower edge.
Hem the rest
of the jacket.

Press under 1.5cm/%" on the long edge of the inner hood and (hand) sew it to cover the seams sewn in the previous two steps.

Modular Jacket Hooded Version

The modular jacket pattern can easily be converted to a hooded jacket. The hood can be lined, double fabric, or a single layer. The jacket can be fastened with a tie belt, buttons and buttonholes, or toggles and loops. Make a long hooded version to use as a dressing gown or after swimming. Watch a sew-a-long: https://www.youtube.com/watch?v=8jdFIiX5GPs

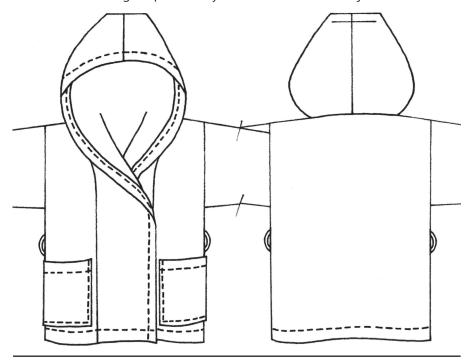

To cut


www.lizhaywood.com.au

OElizabeth M Haywood A Year of Zero Waste Sewing

1. Cut the modular jacket's back, fronts, sleeves and pockets. DON'T cut the 4 x front panels or the collar - you won't need them. Cut a belt and beltloops if required.

Page iv


Page i

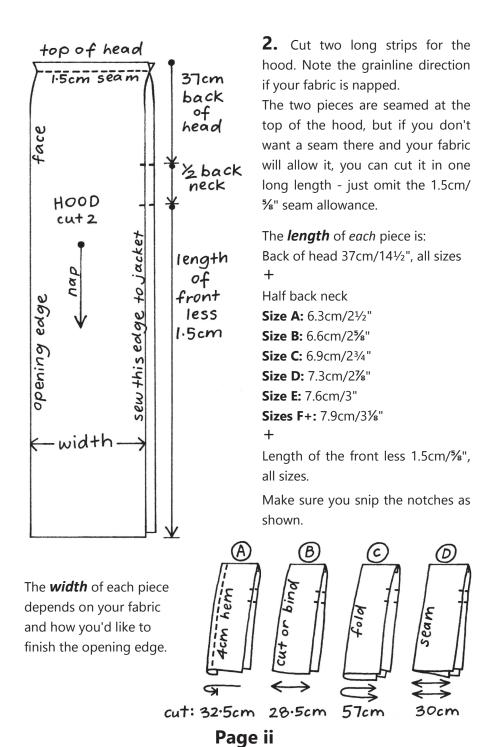

Options:

- \bigcirc For a hemmed edge with a 4cm/1½" hem, cut the width at 32.5cm/12¾". Note the inside of the hem will be visible when the jacket is worn this could be covered with bias binding for a neater finish.
- $^{\circ}$ A bound or raw edge is suitable for thick fabrics or boiled wool. Cut the width at 28.5cm/11 14 ".
- © If the fabric is lightweight, the hood panel can be cut double, giving you a fold for the opening edge. Cut the width at 57cm/22½".

① - The hood can be lined, with a 1.5cm/%" seam on the opening edge. Cut the width at 30cm/11%".

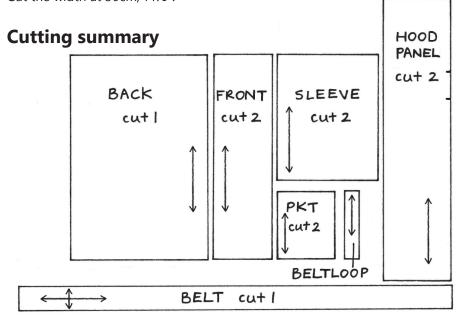

To sew

1. Place the two hood pieces together and sew across the top of the head, pivot, and down the back of the head to the first notch.

